

Work Order ID 140449***140449***

Page 1

Item ID: D205-634-041

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 1/18/2016 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: SH Date: 20160106 Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start ***NR1***
Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D2580-041	G

100 Document Control 0.00

100

DC

Doc.Control -USB or Paperwork

DOCUMENT CONTROL

Memo

0.00

Photocopy D205-634 bluefile & type labels per PPP D205-634-041 CHG005

N/A — M5 FEB 05 2016

110 BENDING MACHINE - SKIDTUBES 0.00

110

CNC Bend 1

CNC Delta 100 Bender


Memo

0.01

1-Bend as per program D2580.C on CNC Bender and Folio 16

2-Cut tubes as per Dwg. D2580

3- scribe batch# in aft end of tube

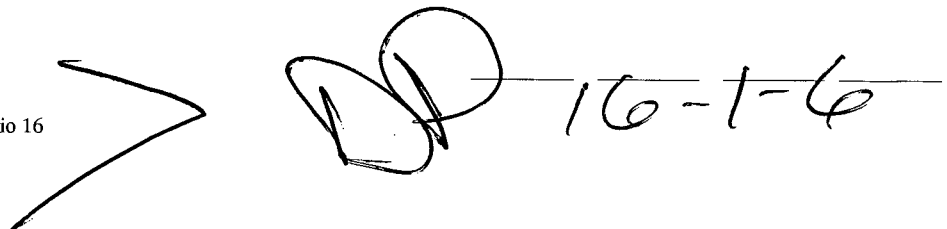

Work Order ID 140449

January 04, 2016 1:08:00 PM

140449

Page 2

Item ID: D205-634-041

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Stop ***NS2***

Start Date: 1/4/2016 Start Qty: 1.00

1

Cust Item ID:

Required Date: 1/18/2016 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120		0.00							
120									
Skidtubes	Memo	0.02							
Skidtubes	1- Deburr ends and remove bending marks								
	2- Prepare tube for welding as per QSI 004								
130	QC5- Inspect part completeness to step on W/O	0.00							
130									
QC	Memo	0.00							
Quality Control									

DAS
18
9-89

1 0 16-01-11

Work Order ID 140449

140449

January 04, 2016 1:08:00 PM

Page 3

Item ID: D205-634-041

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 1/18/2016 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
140		0.00							
140									
Skidtubes									
Skidtubes	Memo	0.03							
	1-Weld step D2576 as per Dwg. D2580 and QSI 004 A/R Aluminum Rod								
	2-Grind welds on step as per Dwg D2580								
	3- Insert D4202-1 spacer, swage as per QSI002 and trim/ grind flush per QSI002 and dwg. Hold x-bolt with DT9701 Use tube expander 1/2 x17G to start expansion and finish with 1/2 x 18G to achieve dwg dimention.								
	4-Drill holes for wearplates using DT 8217 & DT8937, 7.40" from most fwd saddle holes (ref only) Open holes to 19/64", adjust stopper not to hit web.Deburr								
	6-Drill pilot holes for aft cap using DT 8215Open holes to 0.208". Deburr								
	7-Drill pilot holes for Tow ring using DT8091, open to .640"and Deburr								
150	QC10- Inspect visual per QSI004- ground welds	0.00							
150									
QC	Memo	0.00							
Quality Control									

MB 2917 7 BE 16-01-11

16-1-11

38
9-89

JAN 14 2016

38
9-89

JAN 14 2016

January 04, 2016 1:08:00 PM

Item ID: D205-634-041

Accept

N900040100

Setup Start *NS1*

Revision ID:

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Stop *NS2*

Start Date: 1/4/2016 **Start Qty:** 1.00 ***1***

Cust Item ID:

Required Date: 1/18/2016 **Req'd Qty:** 1.00 ***1***

Customer:

Reference:

Approvals: **Process Plan:** _____ **Date:** _____ **Tooling:** _____ **Date:** _____

Run Start *NR1*

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop *NR2*

[illegible]

170	Pressure Wash per QSI005 4.3	0.00
-----	------------------------------	------

170
 HandFinish Memo 0.01

Hand Finishing Re-alodine tube as per QSI 005 section 4.1.2.1 do not acid etch and leave fwd cap out of solution.

180	White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum	0.00
-----	--	------

180
Powdercoat

Powder Coating

START TIME:	8:10
OVEN TEMPERATURE:	325
FINISH TIME:	11:12

Work Order ID 140449***140449***

Page 5

Item ID: D205-634-041

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 1/18/2016 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
190	QC3- Inspect Part Finish	0.00							
190									
QC	Memo	0.00							
Quality Control									

DAS
15
9-89

Work Order ID 140449***140449***

January 04, 2016 1:08:00 PM

Page 6

Item ID: D205-634-041

Accept

N900040100

Setup Start

NS1

Revision ID:

Stop

NS2

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016 Start Qty: 1.00

1

Cust Item ID:

Required Date: 1/18/2016 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start

NR1

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

200

0.00

200

HandFinish

Hand Finishing

Memo

0.03

1-Install inserts & wearplates & Gaskets as per Dwg. D2580. Use a drop of
Sikaflex on insert holes before installing wearplates
A/R Sikaflex-291 11133427
Sikaflex expire date: 11/10/16

2-Coat D2594-3 O' rings with Petroleum Jelly and install on D2594-1 plugs as
per Dwg D2580

3-Inspect for foreign object per QSI 024

4-Install 2855 Aft Cap as per Dwg D2580 and seal Fwd Step & Aft Cap with
Sikaflex. Clean excess adhesive
A/R Sikaflex-291 11133427
Sikaflex expire date: 11/10/16

5-Wing Walk as per Dwg D2580 and QSI 005 4.4
Batch: 11133576

1 x 1610119

Work Order ID 140449

140449

January 04, 2016 1:08:00 PM

Page 7

Item ID: D205-634-041

Accept

N900040100

Setup Start

NS1

Revision ID:

Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Stop

NS2

Start Date: 1/4/2016 Start Qty: 1.00

1

Cust Item ID:

Required Date: 1/18/2016 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

Run Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
210	QC5- Inspect part completeness to step on W/O	0.00							
210									DAS 38 9-89
QC	Memo	0.00							
Quality Control	Inspect Aft Cap, Fwd Step and Wing Walk of work to Current Step Inspect for Foreign objects per QSI 024								JAN 25 2016
220		0.00							DAS 27 9-89
220	Packaging								
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPPD205-634-041								
	Location: _____								
	PPP Rev: _____								
230	QC21- Final Inspection - Work Order Release	0.00							
230									
QC	Memo	0.00							
Quality Control									

FEB 05 2016

FEB 05 2016

20160205

Picklist Print

January 04, 2016 1:08:04 PM

Page 1

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

Comments:

IPP Rev:N 02.08.28 FP was QC5 in Step 27; Added QC5 to Step 30
 KJ IPP Rev P 10.02.19
 per PAR09-043 EC verified by:DD
 IPP Rev. O 06.02.28 Added paperwork EC
 IPP Rev:P 07-07-09 SS Wearplates & Gaskets JLM IPP Rev:Q
 10.12.01 as per chg003 DD verf:EC IPP REV:R 12.01.23 AS
 PER ECN11-684 VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D4202-1		Manufactured	No			140	Each	231.0000	20	20			
D4202-1													
Spacer													

Location	Loc Qty	Loc Code
LG001	231	
134465	1	
135848	1	
136610	229	

D2580-1		Manufactured	No			110	Each	4.0000	1	1			
D2580-1													
205 Bent Tube													

Location	Loc Qty	Loc Code
LG002	4	
138162	4	

D2576-3		Manufactured	No			140	Each	22.0000	1	1			
D2576-3													
Step (Machining Detail)													

Location	Loc Qty	Loc Code
LG001	22	
136730	22	

Picklist Print

January 04, 2016 1:08:04 PM

Page 2

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

D2855

Manufactured No

200

Each

92.0000

1

1

D2855

Cap

ll 16/01/19

Location

Loc Qty

Loc Code

FP001

92

10360

2

117281

2

134027

34

137568

54

AN3-5A

Purchased

No

200

Each

161.0000

2

2

AN3-5A

Bolt

ll 16/01/19

Location

Loc Qty

Loc Code

FP001

30

m133686

30

ST350

131

m133686

131

NAS1149D0332J

Purchased

No

200

Each

1,277.000

2

2

NAS1149D0332.J

Washer

ll 16/01/19

Location

Loc Qty

Loc Code

CA

14

m129682

14

FP001

70

m129682

70

GA

291

m132677

291

ST264

902

m133498

902

January 04, 2016 1:08:04 PM

Shop Packet Print

Page 2

Picklist Print

January 04, 2016 1:08:04 PM

Page 3

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

ALS7-1032-130

AELS8-1032-130 Purchased

No

200

Each

2,796.000

50

50

AI S7-1032-130

Rivnut

lll 16/01/19

Location

Loc Qty

Loc Code

FG

100

M128649

100

FP001

1357

M128649

1357

st549

1339

M128649

1339

x50

AN3C4A

Purchased

No

200

Each

565.0000

50

50

AN3C4A

Bolt

lll 16/01/19

Location

Loc Qty

Loc Code

FG

20

122814

20

FP001

533

M132317

76

M132551

61

M132803

50

M133440

346

ST349

12

M133234

12

x50

Picklist Print

January 04, 2016 1:08:04 PM

Page 4

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

NAS1149C0332R

Purchased

No

200

Each

2,850.000

50

50

NAS1149C0332R

WASHER

all 16/01/19

Location

Loc Qty

Loc Code

FP001

1547

m132262

4

m132930

1004

m133284

539

GA

331

m133284

331

ST266

972

m133284

972

D3566-13

Manufactured

No

200

Each

20.0000

1

1

D3566-13

Gasket Fwd

all 16/01/19

Location

Loc Qty

Loc Code

FG

4

92482

2

98908

2

FP001

16

137076

3

138176

13

D3566-5

Manufactured

No

200

Each

19.0000

1

1

D3566-5

Gasket Center Aft

all 16/01/19

Location

Loc Qty

Loc Code

FG

2

94119

2

FP001

17

139236

17

B136424

X1

January 04, 2016 1:08:04 PM

Shop Packet Print

Page 4

Picklist Print

January 04, 2016 1:08:04 PM

Page 5

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

D3566-1

Manufactured No

200

Each

31.0000

2

2

D3566-1

Gasket Aft / Fwd

all 16/6/15

Location

Loc Qty

Loc Code

FG

8

117012

4

96430

2

98981

2

FP001

23

138321

1

139221

22

X

X

D3564-11

Manufactured No

200

Each

10.0000

1

1

D3564-11

Wearplate Aft

all 16/6/15

Location

Loc Qty

Loc Code

FG

6

77056

4

85473

2

FP002

4

136463

4

X

D3564-13

Manufactured No

200

Each

9.0000

1

1

D3564-13

Wearpad Fwd

all 16/6/15

Location

Loc Qty

Loc Code

FG

2

89044

2

FP001

7

136628

1

136629

6

X

January 04, 2016 1:08:04 PM

Shop Packet Print

Page 5

Picklist Print

January 04, 2016 1:08:04 PM

Page 6

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

D3564-9

Manufactured No

200

Each

6.0000

1

1

D3564-9

Wearplate Fwd

**

all 16/01/16

Location

Loc Qty

Loc Code

FG

6

B137699

76950

4

88407

2

21

D3564-5

Manufactured No

200

Each

10.0000

1

1

D3564-5

Wearplate Center

**

all 16/01/16

Location

Loc Qty

Loc Code

FG

3

34806

1

89048

2

FP002

7

136429

1

137634

6

21

D2594-3

Manufactured No

200

Each

504.0000

16

16

D2594-3

O-Ring

**

all 16/01/16

Location

Loc Qty

Loc Code

FP001

504

134838

116

135859

24

137829

130

138060

234

216

Picklist Print

January 04, 2016 1:08:04 PM

Page 7

Work Order ID: 140449

140449

Parent Item: D205-634-041

D205-634-041

Parent Item Name: Replacement Skidtube with Standard Wearplates Fits LH or RH

Start Date: 1/4/2016

Required Date: 1/18/2016

Start Qty: 1.00

Required Qty: 1.00

D2594-1

Manufactured No

200

Each

351.0000

16

16

D2594-1

Plug

all 1/6/16

Location

Loc Qty

Loc Code

FP001

351

119830

68

134804

16

135914

33

136657

100

138397

100

42807

27

88922

7

x16

LIST OF MATERIALS						PART NUMBER	DESCRIPTION
ITEM	QTY -041	QTY -045	QTY -047	QTY -049			
1	X					D2580-041	SKIDTUBE ASSEMBLY
2		X				D2580-045	SKIDTUBE ASSEMBLY
3			X			D2580-047	SKIDTUBE ASSEMBLY
4				X		D2580-049	SKIDTUBE ASSEMBLY
20	1	1	1	1		D2500-1-190	EXTRUSION
21			16	16		D2570	BUSHING
22	1	1	1	1		D2576-3	STEP
23		4				D2579	SPACER
24	16	16	8	8		D2594-1	PLUG
25	16	16	8	8		D2594-3	O-RING
26	1	1	1	1		D2596	205 WEB
27	1	1	1	1		D2855	AFT CAP
28	1	1				D3564-5	WEARSHOE
29	1	1				D3564-9	WEARSHOE
30	1	1				D3564-11	WEARSHOE
31	1	1				D3564-13	WEARSHOE
32	2	2				D3566-1	GASKET
33	1	1				D3566-5	GASKET
34	1	1				D3566-13	GASKET
35	20	20	24	24		D4202-1	SPACER
36			1			D4406-041	WEARPLATE ASSEMBLY
37			1			D4406-043	WEARPLATE ASSEMBLY
37				1		D5061-1	FWD WEARPLATE
37				1		D5061-3	AFT WEARPLATE
50	50	50				ALS7-1032-130 or AKS7-1032-130 or AKS4-1032-130 or AELS-1032-130	INSERT
51	50	50				AN3C4A	BOLT
52	2	2	2	2		AN3-5A	BOLT
53			8	8		AN4-45A	BOLT
54	50	50				NAS1149C0332R	WASHER (AN960C10L)
55	2	2	2	2		NAS1149D0332J	WASHER (AN960JD10L)
56			8	8		MS21042-4	NUT (OR MS21042L4)


GENERAL NOTES:

- MATERIAL: N/A
- FINISH: CHEMICAL CONVERSION PER DART QSI 005 4.1 PRIOR TO INSERTING D2596 WEB POWDER COAT ASSEMBLY (-041/-047/-049) GLOSS WHITE (REF 4.3.5.1) PER DART QSI 005 4.3 POWDER COAT ASSEMBLY (-045) GREEN SANDTEX (REF 4.3.5.8) PER DART QSI 005 4.3 BLACK ANTI-SKID PAINT AS INDICATED PER DART QSI 005 4.4.
- TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- UNITS: INCHES UNLESS OTHERWISE NOTED.
- BREAK SHARP EDGES: 0.005 TO 0.010 MAX.
- IDENTIFICATION: NONE
- WEIGHT: D2580-041 = 34.5 lbs
D2580-045 = 34.5 lbs
D2580-047 = 45.1 lbs
D2580-049 = 32.0 lbs
- WELDING PER DART QSI 004.
- INSERT D2596 WEB TO LOCATION SHOWN OFF AFT END OF SKIDTUBE AND BOND WEB INTO OUTER TUBE WITH NON-STRUCTURAL SIKAFLEX-241 ADHESIVE PER DART QSI 015 BEFORE BENDING. ENSURE HOLES LINE-UP.
- BEND AS A SMOOTH RADIUS STARTING WITH A MAXIMUM CENTERLINE RADIUS OF 80 AND ENDING WITH A MINIMUM RADIUS OF 30. A MAXIMUM REDUCTION OF 0.200 IN DIAMETER IS ALLOWABLE IN THE BENT PORTION OF THE TUBE.
- USE DART DRILL TEMPLATE DT8217 & DT8937 ONLY FOR D2580-041/-045 TO LOCATE AND DRILL Ø0.297 HOLES FOR WEARSHOE INSERTS. INSTALL ALS7-1032-130 PER SECTIONS B-B AND F-F (50 PLACES) AFTER FINISH. INSTALL AN3C4A BOLTS AND NAS1149C0332R WASHERS WITH SIKAFLEX-241/291.
- INSERT D2594-1 PLUG C/W D2594-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE) AFTER FINISH (16 PLACES FOR D2580-041/-045 AND 8 PLACES FOR D2580-047/-049)
- IT IS ACCEPTABLE TO GRIND A RELIEF IN THE D2855 AFT CAP TO PREVENT INTERFERENCE WITH THE SPACER AT THIS LOCATION

RELEASED
2014-04-29


20160106 SU 140449

G	ADDED -049, -047 WEIGHT UPDATED PER DSI 9598	AJS	14.04.09
F	INCORPORATE DEO D2580-E-1 PER PAR12-218	DC	13.06.20
E	ADD D2580-047 (ZN C4-7) AND D2580-7 (ZN B3-8); INCLUDED DEO D2580-D-1; REFORMATTED DRAWING TO CURRENT STANDARDS; DT8217 & DT8937 WAS TD2577-205 (ZN C4-1)	RF	11.06.21
D	CHANGE TO SS WEARPLATES AND GASKETS, INCLUDE DEO 9124/ 9183	PH	07.04.05
C	REDRAWN, INCLUDED DEO 9094/ 9097	CP	98.08.26
B	AS MANUFACTURED	DS	96.12.02
A	NEW ISSUE	DS	96.09.16
REV.	DESCRIPTION	BY	DATE
DESIGN	DS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	A.P.	DRAWING NO.	REV. G
MFG. APPR.	DS	D2580	SHEET 1 OF 9
APPROVED	DS	TITLE	SCALE
DE APPR.	DS	205 SKIDTUBE ASSEMBLY	NTS
DATE	14.04.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

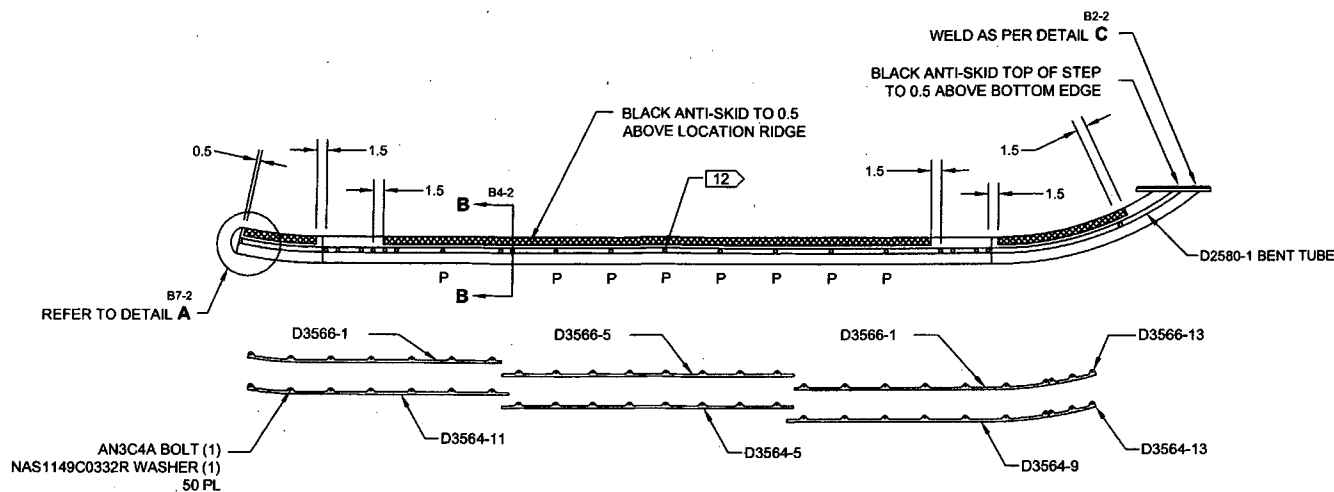


D2580-041 ASSEMBLY DETAIL

DETAIL A
SCALE 5X

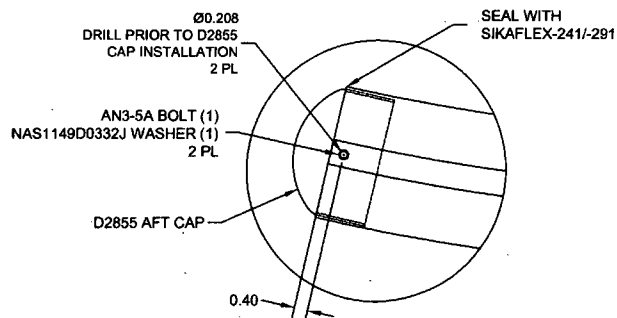


SECTION B-B
SCALE 5X

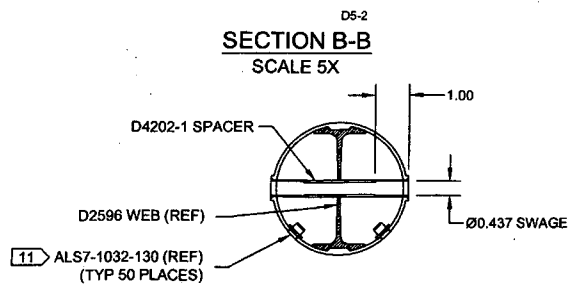


AFTER DRILLING AND BENDING ASSEMBLY
PERFORM THE FOLLOWING FOR Ø0.508 HOLES ONLY:
1. INSERT D4202-1 SPACER (20 PLACES)
2. SWAGE TO Ø0.437 X 1.00 DEEP PER QSI 002
3. TRIM / GRIND FLUSH PER QSI 002

DETAIL C
SCALE 5X

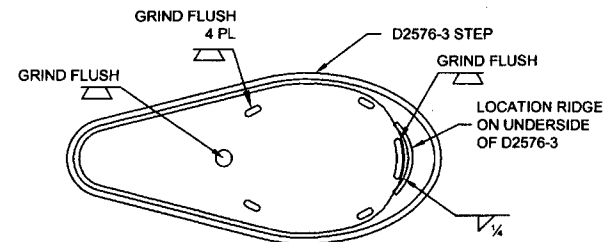

DESIGN	DS	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	AP	DRAWING NO.	REV. C
MFG. APPR.		D2580	SHEET 2 OF 9
APPROVED		TITLE	SCALE
DE APPR.		205 SKIDTUBE ASSEMBLY	NT
DATE	14.04.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			


RELEASED
2014-04-29

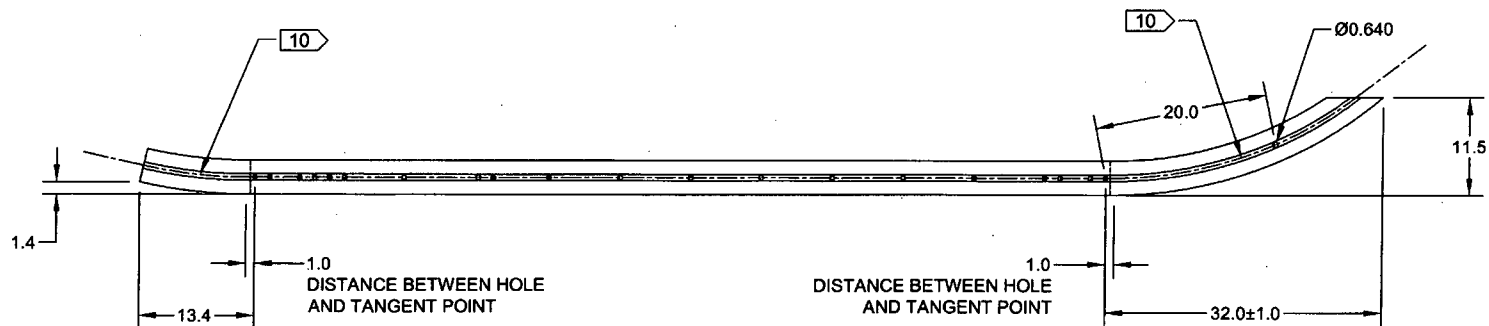

D2580-1 BENT TUBE
(MAKE FROM D2580-101 TUBE)

RELEASED
2014-04-29


DESIGN	DS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	A.P.	DRAWING NO.	REV. G
MFG. APPR.	<i>[Signature]</i>	D2580	SHEET 3 OF 9
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	205 SKIDTUBE ASSEMBLY	NTS
DATE	14.04.09	COPYRIGHT © 1998 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED BY THE EXPRESS COVENANT THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD	

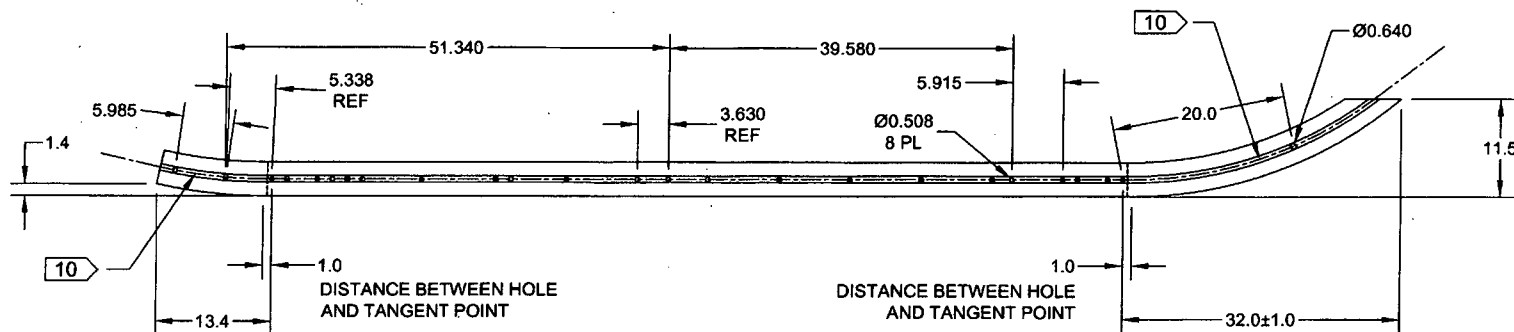


D2580-5 BENT TUBE
(MAKE FROM D2580-101 TUBE)

RELEASED
2014-04-29


DESIGN	DS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	A.L.	DRAWING NO.	REV. G
MFG. APPR.		D2580	SHEET 5 OF 9
APPROVED		TITLE	SCALE
DE APPR.		205 SKIDTUBE ASSEMBLY	NTS
DATE	14.04.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

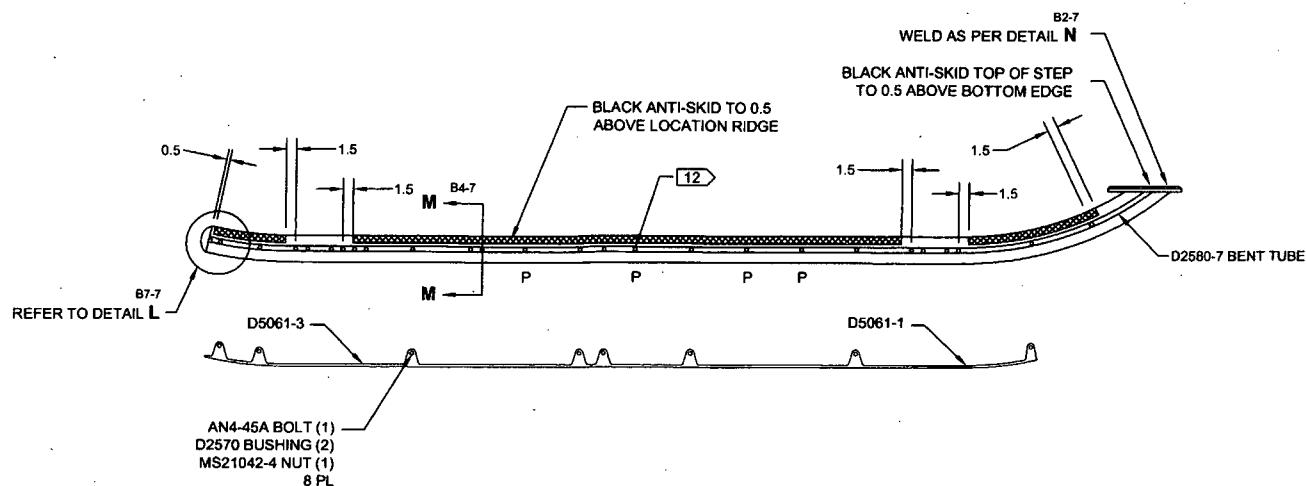


D2580-049 ASSEMBLY DETAIL 

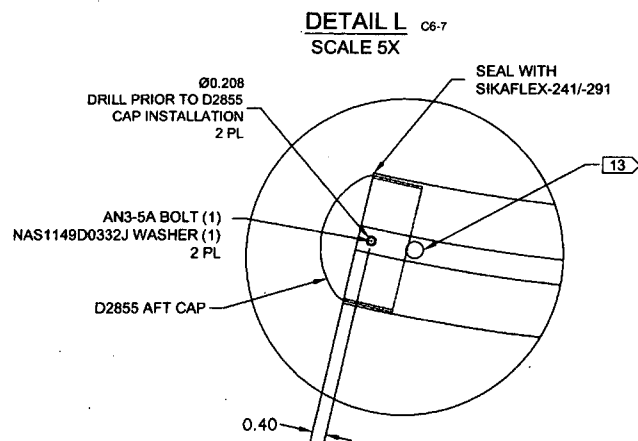

SECTION M-M D5-7
SCALE 5X

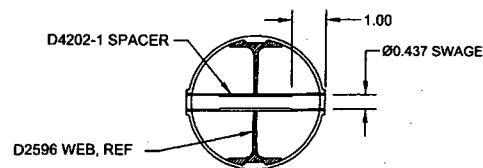


AFTER DRILLING AND BENDING ASSEMBLY
PERFORM THE FOLLOWING FOR Ø0.508 HOLES ONLY:
1. INSERT D4202-1 SPACER (24 PLACES)
2. SWAGE TO Ø0.437 X 1.00 DEEP PER QSI 002
3. TRIM/GRIND FLUSH PER QSI 002

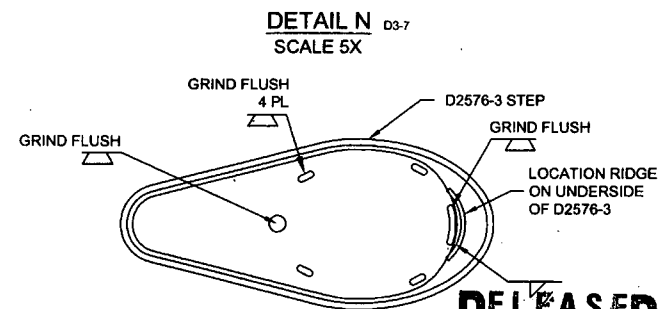

RELEASED
2014-04-29


DESIGN	DS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	A.P.	DRAWING NO.	REV. G
MFG. APPR.		D2580	SHEET 7 OF 9
APPROVED		TITLE	SCALE
DE APPR.		205 SKIDTUBE ASSEMBLY	NTS
DATE	14.04.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

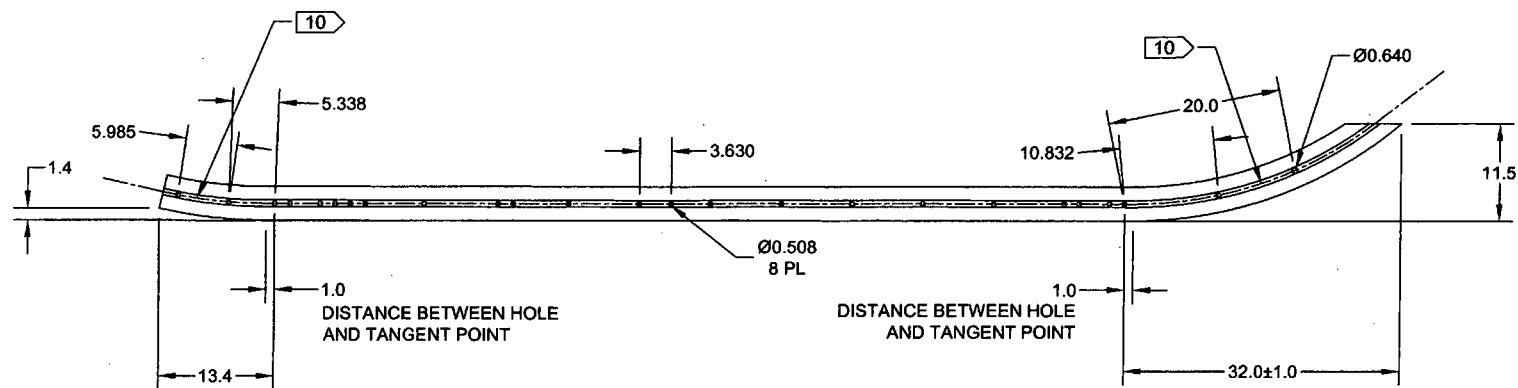


D2580-7 BENT TUBE
(MAKE FROM D2580-101 TUBE)

RELEASED
2014-04-29
WJ

DESIGN	DS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	A.P.	DRAWING NO.	REV. G
MFG. APPR.		D2580	SHEET 8 OF 9
APPROVED		TITLE	SCALE
DE APPR.		205 SKIDTUBE ASSEMBLY	NTS
DATE	14.04.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL. IT IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

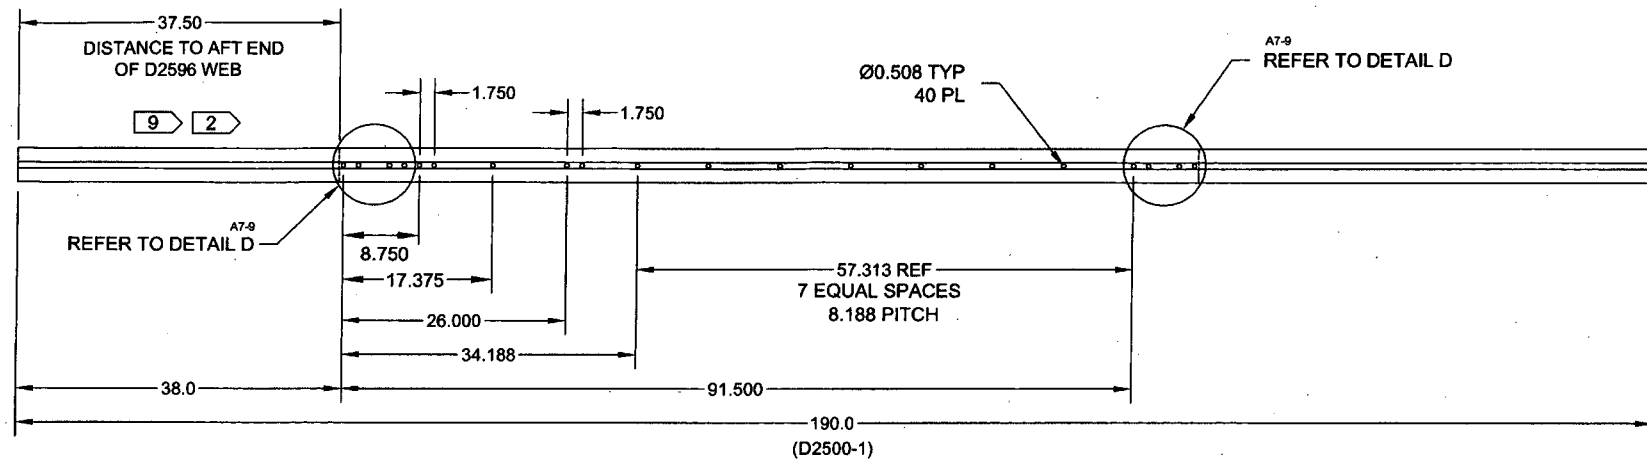

D2580-101 TUBE

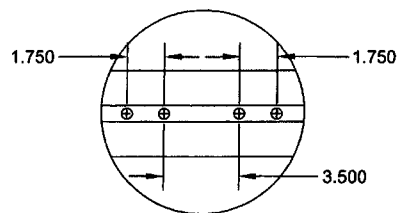

DETAIL D C3-9
SCALE 5X C7-9

RELEASED
2014-04-29
WID

DESIGN	DS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>A.P.</i>	DRAWING NO.	REV. G
MFG. APPR.	<i>AA</i>	D2580	SHEET 9 OF 9
APPROVED	<i>WID</i>	TITLE	SCALE
DE APPR.	<i>WID</i>	205 SKIDTUBE ASSEMBLY	NTS
DATE	14.04.09	COPYRIGHT © 1996 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	